

RECEIVING YOUR EQUIPMENT

 
Upon receipt of your equipment, you should check the following:

1. Are the systems still on the pallet?
2. Confirm the number of boxes you are signing for.
3. Is there any obvious damage to the product or the boxes?

If there are any discrepancies or any obvious damage to the equipment or boxes, please note it on the "Bill of Lading" and/or refuse the shipment.

After receiving the equipment from the carrier, remove packaging and inspect for any hidden freight damage. If freight damage has occurred, call the freight company and customer service (877) 386-0823 to report the damage. Photograph all damages to be submitted with the claim. **THIS MUST BE DONE WITHIN FIVE BUSINESS DAYS OF DELIVERY.** If not reported within 3 business days, Wellsys and/or carrier will not be responsible for replacement or repair.

DISPLAY & CONTROL PANEL

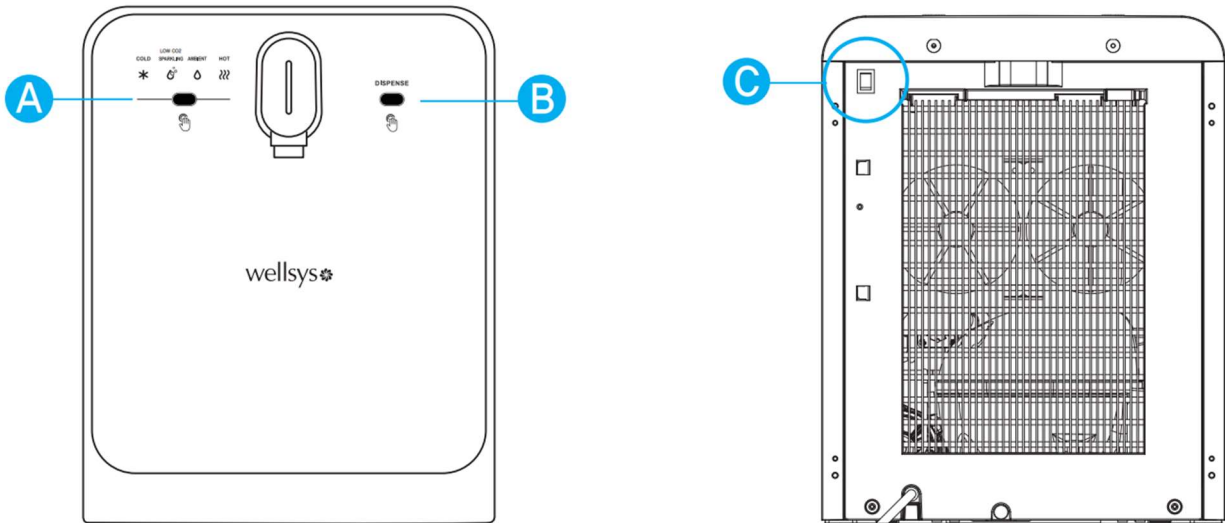


<p>COLD</p>	COLD WATER LED	COLD WATER LED is on when the ambient water is selected. (Blue)
<p>SPARKLING</p>	SPARKLING WATER LED	SPARKLING WATER LED is on when the ambient water is selected. (Green)
<p>AMBIENT</p>	AMBIENT WATER LED	AMBIENT WATER LED is on when the ambient water is selected. (White)
<p>HOT</p>	HOT WATER LED	HOT WATER LED is on when the ambient water is selected. (Red)
<p>LOW CO2</p>	LOW CO2 LED	LOW CO2 LED is ON when the CO2 is exhausted. (Green)
<p>A</p>	TOUCH FREE SELECT SENSOR	Selecting the Cold/Sparkling/Ambient/Hot Water in order.
<p>B</p>	TOUCH FREE DISPENSE SENSOR	Dispensing the selected water. (Cold/Sparkling / Ambient/hot)
	WATER DISPENSE SPOUT	Water is dispensed from WATER DISPENSE SPOUT.
<p>C</p>	HOT WATER ON/OFF SWITCH	Press the switch up or down to set/cancel the HOT WATER.
	LOW CO2 ALERT	Low CO2 alert when CO2 pressure drops below 2bar.


OPERATING INSTRUCTIONS

The below pictures show the front user interface (UI) and control panel for the **S4 Water Treatment System**.

 - To Select Water:** Place your hand close to the TOUCH FREE SELECT SENSOR (Left Sensor). Move your hand away and back to the sensor to select the next option. **Cold Water → Sparkling Water → Ambient Water → Hot Water** is the selection order.
- *Your hand should be 3-4cm away from the sensor to activate.
 - *Move your hand back and forth to cycle, OR hold your hand over sensor and the selection will change automatically every 1 second.
 - *If the sensor does not detect motion for more than 5 seconds, it will switch to the default mode (Cold Water).

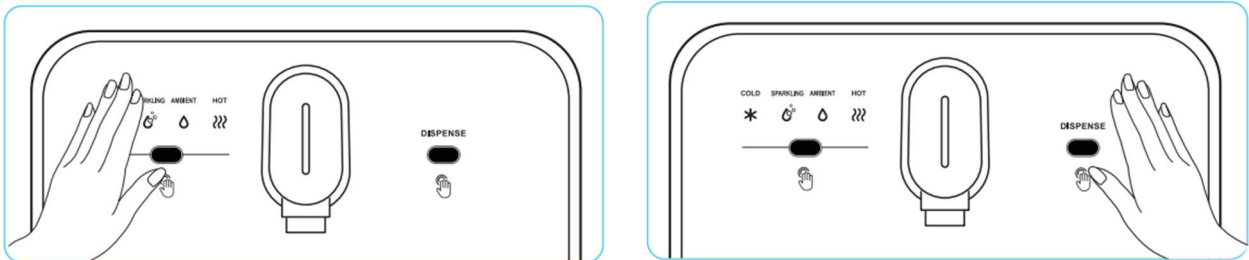

- To Dispense Water:** Place your hand close to the TOUCH FREE DISPENSE SENSOR (Right Sensor) and hold there to dispense. Remove your hand to stop.
- *If both sensors (SELECT & DISPENSE detect any motions simultaneously, then the unit will recognize this as an error and will not operate.
 - *After dispensing the Sparkling Water, some residual bubbles might remain in the internal water path and affect the taste of the next water dispensed.

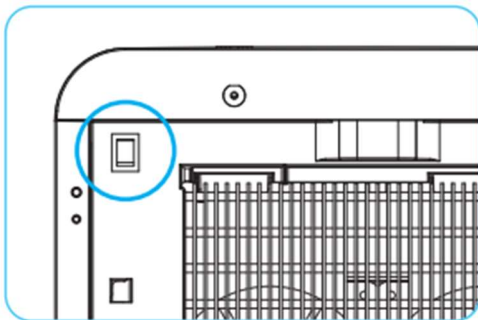 

*Hot water ON/OFF switch is located on the back of the product. In order to disable the Hot Water Function, flip the switch into the OFF position.