

ERROR CODES

No Lights on Front Display. – No Power to Front PCB. Trace Power Supply

Water Full Light Flashing – Water overfill.

Ice Full Light Flashing – Ice process fault.

All Systems LED's on the front panel will continuously and flash and the ICE 900 will sound while the "DRAIN" switch is in the ON position.

Leak Detector – Float System in the base of the unit that mechanically shuts off inlet water to entire unit.