


## DISABLING THE ENERGY SAVING MODE

**NOTE: THIS CHANGE MUST BE MADE WITH THE MACHINE OFF AND UNPLUGGED. IF NOT DONE, THE CHANGE WILL NOT BE RECOGNIZED.**

Note the DIP switches on the main PCB (the one mounted to the back side of the front upper panel):

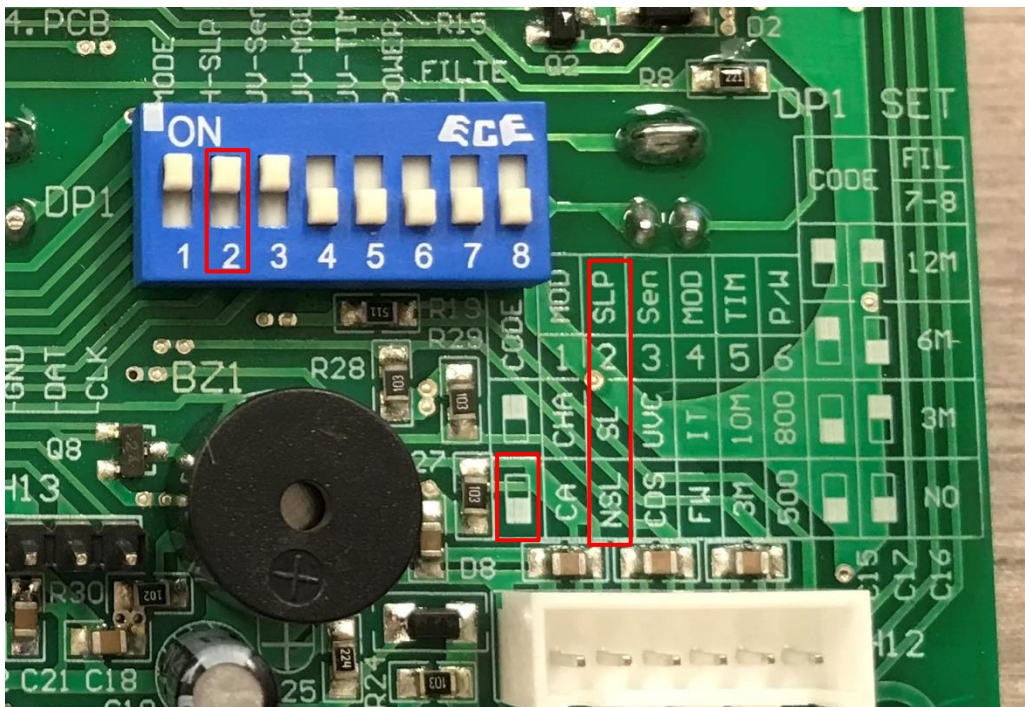

To **DISABLE** the energy saver, DIP #2 must be switched from ON to OFF (Down position), as per the legend printed on the board. This will enable the hot tank to cycle continuously. All units come with Sleep Mode enabled.