

PRE-INSTALLATION PROCEDURES

- ⚠ DANGER! ELECTRICAL SHOCK HAZARD.**
*Only qualified personnel who have read and understand this entire manual should attempt to install, or service this **WL3 FX Water Treatment System**, failure to do so could result in death or serious injury. DO NOT plug into an electrical supply until specifically instructed.*
- ⚠ WARNING! ALWAYS SANITIZE BEFORE USE.**
Sanitize before use to eliminate any potential microbiological contaminants.
- ⚠ CAUTION! DRIP TRAY DRAIN.**
If you intend to provide a drip tray drain for your customer, be aware that you will be called multiple times per month to service and unclog the tubing leading away from the drip tray to drain. Users will clog the drain with paper clips, erasers, napkins, tea bags, gum, and various other intended items. Waterlogic recommends you establish a minimum of weekly visits to the machine for cleaning of the drip tray drain.

Materials Needed:

- Personal Protective Equipment. Rubber or Nitrile Safety Gloves and Protective Eyewear
 - Phillips Screwdriver
 - Temperature Gage
 - Water Pitcher or Container to collect water from the faucet
 - 5-gallon container or drain basin
 - Sanitizer - Household Bleach (5.25% Sodium Hypochlorite) or Citric Acid Based Cleaner
 - ¼" Plastic Tubing, at least 4 feet in length, and assorted ¼" quick connect fittings
 - TDS Meter and Test Strips for measuring chlorine - Optional
1. Unpack the **Waterlogic WL3 FX Water Treatment System** and check exterior for damage.

Flush Filters

- ⚠ CAUTION! FILTER FLUSH REQUIRED.**

WL3 FX's Water Treatment Systems are not supplied with filters. Filters should be configured to optimize your system. Filters need to be configured and specified to do the job given the local water conditions, usage, maintenance schedule, and placement restrictions.

In order for our filters to perform as represented and to provide the best quality water possible, it is essential that filters be replaced periodically. The frequency of filter changes depends upon your water quality and your water usage. For example, if there is a lot of sediment and/or particles in your water, then you will have to change your filters more frequently than a location with little to no sediment. Be sure to replace your filters whenever

you notice a decline in the performance, whether it is a drop in flow rate and/or pressure or an unusual taste in the water.

2. Flush thoroughly per filter manufacturers' recommendation with fresh water to drain.
3. Once flushed, install the filters. Following the flow direction on the filter.

NOTE: Filters should not be flushed prior to 24 hours before installation to limit Microbial Growth.


Sanitizing

Sanitize using a Household Bleach (5.25% Sodium Hypochlorite solution) or other approved cleaner throughout the cold and sparkling water circuits. Follow all instructions on the sanitizer and flush with fresh water through the faucet until odor and taste is acceptable.

⚠️ WARNING! USE PROPER PERSONAL PROTECTIVE EQUIPMENT

Always ensure proper ventilation and use proper personal protective equipment such as gloves and eye protection when using chemicals. Refer to Material Safety Data Sheet for specific requirements of each chemical product. Take all necessary precautions to prevent sanitizer from contacting eyes, clothing, and any other surfaces in could damage (carpets).

4. Mix ½ gallon of sanitizer per directions or use Bleach Solution (1 teaspoon = 1/6 oz. = 5 ml = ½ cap full) of household bleach (Sodium Hypochlorite 5 - 10% Concentration) with 1/2 gallon of water inside Sanitizing Cartridge. Always ensure sanitizer is compatible with stainless steel and acetyl plastic.
5. Connect sanitizing cartridge to inlet water supply and connect to inlet bulkhead fitting on back of unit. Turn on water supply.
6. Connect power to WL350 Water Treatment System and turn on Red Power Switch. DO NOT TURN ON GREEN COMPRESSOR & HEATER SWITCH AT THIS TIME. O=OFF
7. Turn on water supply and check for leaks.

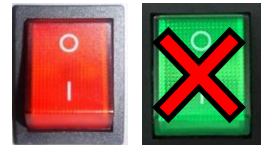

⚠️ DANGER! ELECTRICAL SHOCK HAZARD.

Do not plug in unit unless qualified. Only qualified personnel who have read and understand this entire manual should attempt to install or service this unit.

⚠️ CAUTION! NEVER TURN ON HEATER BEFORE FILLING HOT TANK.

Fill the Cold Circuit with Sanitizer

8. Touch and hold the cold dispensing icon on the front control panel until cold water/sanitizing solution comes out the faucet. Stop dispensing and allow sanitizer to sit in cold tank for 10-15 minutes.

NOTE: Container and drain basin will be required to catch the water from the faucet.

⚠ WARNING! *Use Personal Protective Equipment. Gloves and Eye Protection Required. The first 2 or 3 gallons of water will contain concentrated sanitizer. Use extreme care!*

Flushing the Sanitizer from the Machine

9. Place a pitcher, catch basin, or other container under the faucet of the **WL3 FX Water Treatment System**.
10. Flush the Cold Tank. Run several gallons of water through the faucet by dispensing cold water to dilute and remove the sanitizer from the cold circuit. You can use chlorine test strips to evaluate the water.
11. Once the sanitizer odor/taste has been flushed out of the cold side of the machine the sanitization process for the Cold Circuit is complete.

Fill the Hot Tank

12. Tap, then press and hold the Hot Water icon, to fill the hot tank. Water will dispense from the faucet once the hot tank is full. Flush until water is clear.

⚠ WARNING! HOT CIRCUIT IS NOT SANITIZED.
Water in the hot circuit is not sanitary until the temperature exceeds 77°C (171°F) for at least 5 minutes.

UV System Functional Test

⚠ WARNING! ULTRAVIOLET RADIATION. *Protect your skin and eyes against ultraviolet rays. Never look directly at an operating UV light. Disconnect wiring before removing.*

13. Reinstall the UV Lamp and connect the wiring.
14. Dim or shield the overhead lights and peer into the machine, on top of the Cold Tank, at the UV connector and retaining cap. The blue glow indicates that the lamp is lit.

Compressor Test

15. Switch Green Compressor / Heater to *I=ON position*. **Always ensure tanks are full of water before turning on the heater** or the overload (high limit) will open and require manual reset. If the wire condenser at back of the **WL3 FX Water Treatment System** is warm, the refrigeration system is working.



16. Once the machine reaches its target temperature, the compressor will shut off. Draw a glass of cold water and verify it has been chilled to proper temperature.

Heater Test

17. **Always ensure tanks are full of water before turning on the heater** or the overload (high limit) will open and require manual reset. It will take the heater approximately 10 minutes to heat the water from ambient 24°C (75°F) to the factory set point of 85°C (185°F). Dispense a cup of hot water to ensure the temperature/odor/taste is acceptable.

⚠ WARNING! HOT WATER. *Unit produces Hot Water up to 87°C (188°F). Water above 52°C (125°F) can cause severe burns or scalding. Hot water should be dispensed carefully into insulated container to avoid injury.*

WL3 FX COUNTER TOP DRAINING INSTRUCTIONS

Draining Notes

Drain the **WL3 FX Water Treatment System** for transportation.

⚠ WARNING! STORE UNIT EMPTY. ALWAYS SANITIZE BEFORE REUSE.

The unit must be completely drained and sealed before storing to avoid stagnation and reduce microbial growth).

Prior to draining the hot tank, turn off the Green Heater and Compressor Power Switch (O=OFF), and dispense 2 liters of hot water from the machine. As hot water is dispensed from the faucet of the **WL3 FX Water Treatment System**, colder water will be introduced into the hot tank. Since the Green Heater and Compressor Power Switch is turned off, the heater will not energize and heat the incoming tap water. Following this precaution prevents exposing personnel and equipment (drains, catch basin, etc.) to scalding hot water.



Disable Cold and Hot Tanks



1. Turn off the Green Heater and Compressor Power Switch (O=OFF) to disable the heater and compressor.
2. Dispense 2 liters (1/2 Gallon) of water through the hot tank to cool the water temperature in the hot tank and avoid burns.



⚠ WARNING! HOT WATER. *The WL3 FX Water Treatment System produces Hot Water up to 87°C (188°F). Water above 52°C (125°F) can cause severe burns or scalding. Hot water should be dispensed carefully into insulated container to avoid injury.*

Turn off Water Supply and Bleed Water Pressure

3. Isolate the **WL3 FX Water Treatment System** from feed water by turning off the supply.
4. Dispense cold still water to relieve any pressure built up in the system.
5. Remove the top lid and front panel of the unit to reveal the drain ports at the bottom of the machine. **It is recommended to move the machine over a sink or place a container under the valves to catch drain water.**
6. Unscrew the cap of the Cold Drain port and Press and Hold the Cold Water Dispense Button until all Cold Water has drained from the **WL3 FX Water Treatment System out of the inlet port.** Replace cap when finished.
7. Repeat this procedure for the Hot Tank by using the Hot Valve and double pressing and holding the Hot Dispense button until all hot water has drained from the **WL3 FX Water Treatment Machine.** Replace the cap when finished.

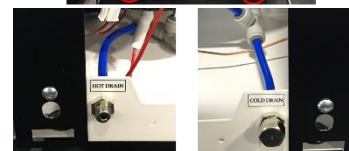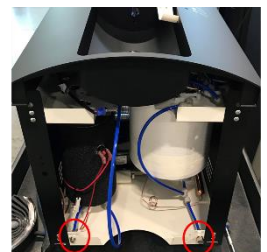

WL3 FX TOWER DRAINING INSTRUCTIONS

Draining Notes

Drain the *WL3 FX Water Treatment System* for transportation.

⚠️ WARNING! STORE UNIT EMPTY. ALWAYS SANITIZE BEFORE REUSE.

The unit must be completely drained and sealed before storing to avoid stagnation and reduce microbial growth).

Prior to draining the Hot Tank, turn off the Green Heater and Compressor Power Switch (*O=OFF*), and dispense 2 liters of hot water from the machine. As hot water is dispensed from the faucet of the *WL3 FX Water Treatment System*, colder water will be introduced into the hot tank. Since the Red Heater and Compressor Power Switch is turned off, the heater will not energize and heat the incoming tap water. Following this precaution prevents exposing personnel and equipment (drains, catch basin, etc.) to scalding hot water.



Disable Cold and Hot Tanks

1. Turn off the Green Heater and Compressor Power Switch (*O=OFF*) to disable the heater and compressor.
2. Dispense 2 liters of water through the Hot Tank to cool the water temperature in the hot tank and avoid burns.



⚠️ WARNING! HOT WATER. *The WL3 FX Water Treatment System produces Hot Water up to 87°C (188°F). Water above 52°C (125°F) can cause severe burns or scalding. Hot water should be dispensed carefully into insulated container to avoid injury.*

Turn off Water Supply and Bleed Water Pressure

3. Disconnect the *WL3 FX Water Treatment System* from feed water.
4. Dispense cold still water to relieve any pressure built up in the system.
5. Insert approx. 3 inches of blue tubing into the Line Bulkhead fitting at back of the *WL3 FX Water Treatment System* to allow water to drain out the inlet port.
6. Press and hold the Cold Water Dispense Button until all Cold Water has drained from the *WL3 FX Water Treatment System* through the inlet port.
7. Double press and hold the Hot Water Dispense Button until all Hot Water has drained from the *WL3 FX Water Treatment System* out of the inlet port. The machine is now drained.

Bulkhead Fitting 



INSTALLATION PROCEDURES

Safety and Installation Guidelines

Ensure all Local, State, and Federal Laws and Codes including health and safety guidelines are met when installing **Waterlogic** Equipment. Only qualified service technicians should attempt installation and service of **Waterlogic** Equipment.

- ⚠ WARNING! ELECTRICAL SHOCK HAZARD.** Always unplug (isolate from power supply) to prevent electrical shock except where electrical tests are specified.
- ⚠ WARNING! IMPROPER SUPPLY OR CONNECTION CAN RESULT IS RISK OF SHOCK.** Connect to a 15 amp, 120V 60Hz properly grounded outlet (GFI is recommended). Ensure polarity is correct and always use a 3-prong outlet. Consult a qualified electrician if you have any questions.
- ⚠ WARNING! USE ONLY Waterlogic SUPPLIED POWER CORD.** Locate system within 5 feet of power supply. Never use an extension cord or adapter. Do not use a damaged power cord or plug. Keep power cord out of heavy traffic areas and away from heat sources. Do not, under any circumstances, remove ground prong or alter the power cord. Never pull the power plug from the outlet with a wet hand or allow the plug to get wet. Failure to use the supplied power cord will void UL Certification and Warranty.
- ⚠ CAUTION! INDOOR USE ONLY.** Never expose to direct sunlight, heat sources, or ambient air temperature above 38°C (100°F) or below 2°C (35°F). Install indoors and keep unit away from excessive humidity. Never expose to freezing temperatures. Ensure there is adequate clearance around the unit to allow refrigeration system condenser to dissipate heat. Warmer environments require more clearance around the unit. Minimum clearance around all surfaces of the machine is 2-inches. Installs where the ambient temperature exceeds 80°F, require a minimum of 4-inches clearance for proper heat dissipation and efficient operation.
- ⚠ CAUTION! USE A WATER PRESSURE REGULATOR.** **Waterlogic** will not be responsible for injury or damage caused by excessive water pressure. Operating pressure must be 40 psi to 60 psi. Be aware any of potential pressure surges caused by building/municipal pumping stations.
- ⚠ CAUTION! USE UV STABILIZED SUPPLY LINES.** Feed the unit with a potable ambient or cold-water supply only. Feed water over 100° F (37°C) can damage the treatment components. Water block devices and external leak detectors are strongly recommended. Locate the unit as close to the water supply and the electrical connections as possible.
- ⚠ WARNING! STORE AND TRANSPORT UNIT EMPTY. ALWAYS SANITIZE BEFORE USE.** The unit must be completely drained and sealed before storing to avoid stagnation and reduce microbiological contamination (potential bacterial growth). Sanitize before use to eliminate any potential microbiological contaminates


Pre-installation and sanitization procedures as prescribed in this manual must be performed before installing the **WL3 FX Water Treatment System**.

Always install indoors and place the **Waterlogic WL3 FX Water Treatment System** on a firm, flat and stable surface.

1. Attach the water supply line to the 1/4" feed water inlet bulkhead fitting on the back of the **WL3 FX Water Treatment System**. **Waterlogic** requires the use of a water pressure regulator. Water feed pressure must be between 40-60 psi. Turn on the water supply and check for leaks.

2. Check to ensure that the Green Heater and Compressor Switch is the O=OFF position, and that the Red Power Switch is in the I=ON position

NOTE: Switches have internal LED that illuminates when placed in I=ON position.

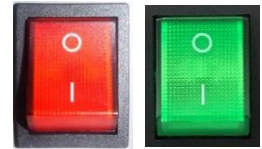

3. Connect the power cord to the back of the **Waterlogic WL3 FX Water Treatment System** and to a 120 Volt supply.
4. Fill the Cold Tank. Hold a container under the dispensing faucet, press and hold the cold dispensing button until a continuous flow of water is obtained. Once a continuous flow is obtained, release the dispensing button. Cold tank is now full.
5. Fill the Hot Tank. Hold a container under the dispensing faucet. Double press and hold the Hot Dispense Button until a continuous flow of water is obtained. Once a continuous flow is obtained, release the Hot Dispense Button. Hot tank is now full.

⚠ CAUTION! NEVER TURN ON HEATER BEFORE FILLING HOT TANK.

Green Heater and Compressor Switch must be in the O=OFF position while the Hot Tank is empty. Damage could occur within one minute and the overload (high limit) will require manual reset if heater is turned on with an empty Hot Tank.



6. Verify that the UV Lamp operates as expected.

⚠ WARNING! ULTRAVIOLET RADIATION. *Protect your skin and eyes against ultraviolet rays. Never look directly at an operating UV light. Always disconnect before removal.*

7. Move the **Waterlogic WL3 FX Water Treatment System** into its final operating position. Be sure that a minimum of 2" clearance is maintained around both sides and the back of the **WL3 FX Water Treatment System**.
8. This is important to allow proper airflow and heat exchange of refrigeration system.
9. Level the **WL3 FX Water Treatment System** using the adjustable feet to level if necessary. Never install on incline.
10. Turn the Green Heater and Compressor Switch to I=ON position.

11. When the **WL3 FX Water Treatment System** has reached its Hot Temp Set Point, the heater will cycle off. When the **WL3 FX Water Treatment System** has reached its Cold Temp Set Point Temperature, the compressor will cycle off.
12. Once the **WL3 FX Water Treatment System** is at the target temperature(s), sample the water to ensure water meets expectations and additional rinsing or adjustment is not required.
13. Check the **WL3 FX Water Treatment System** for any leaks. External Leak Protection is always recommended.

